



<b>tires</b> (excluding spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x
<b>Drive shafts</b> -check the play - check rubber bellows				x			x			x	
<b>Brake pads, brake discs</b> -check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x
<b>Brake lines, fuel lines, fuel filter</b> -check for leakage and damage				x			x			x	
<b>External fuel filter,</b> For markets with contaminated fuel. -replace	<b>Max. 25 000 km</b> intervals. More frequent replacement of the fuel filter may be required in some markets.										
<b>Program point:</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>
	<b>km x 1000:</b>	<b>20</b>	<b>40</b>	<b>60</b>	<b>80</b>	<b>100</b>	<b>120</b>	<b>140</b>	<b>160</b>	<b>180</b>	<b>200</b>
	<b>miles x 1000:</b>	<b>12,5</b>	<b>25</b>	<b>37.5</b>	<b>50</b>	<b>62,5</b>	<b>75</b>	<b>87,5</b>	<b>100</b>	<b>112.5</b>	<b>125</b>
<b>Front suspension, steering system</b> -check for signs of wear				x			x			x	
<b>Rear wheel suspension</b> -check for signs of wear				x			x			x	
<b>Lower the vehicle</b>											
<b>Valve play</b> - check/adjust	Only applies to B4164S3								x		
<b>Valve play</b> - check/adjust	Only applies to B4184S8						x				
<b>Gas filter crankcase ventilation,</b> in the air cleaner (ACL) housing -replace				x			x			x	







tire pressure											
<b>Drive shafts</b> -check the play - check rubber bellows			x			x			x		
<b>Brake pads, brake discs</b> -check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x
<b>Brake lines, fuel lines, fuel filter</b> -check for leakage and damage			x			x			x		
<b>External fuel filter,</b> For markets with contaminated fuel. -replace	<b>Max. 25 000 km</b> intervals. More frequent replacement of the fuel filter may be required in some markets.										
<b>Program point:</b>	<b>year:</b>	<b>11</b>	<b>12</b>	<b>13</b>	<b>14</b>	<b>15</b>	<b>16</b>	<b>17</b>	<b>18</b>	<b>19</b>	<b>20</b>
	<b>km x 1000:</b>	<b>220</b>	<b>240</b>	<b>260</b>	<b>280</b>	<b>300</b>	<b>320</b>	<b>340</b>	<b>360</b>	<b>380</b>	<b>400</b>
	<b>miles x 1000:</b>	<b>137,5</b>	<b>150</b>	<b>162,5</b>	<b>175</b>	<b>187,5</b>	<b>200</b>	<b>212,5</b>	<b>225</b>	<b>237,5</b>	<b>250</b>
<b>Front suspension, steering system</b> -check for signs of wear			x			x			x		
<b>Rear wheel suspension</b> -check for signs of wear			x			x			x		
<b>Lower the vehicle</b>											
<b>Valve play</b> - check/adjust	Only applies to B4164S3						x				
<b>Valve play</b> - check/adjust	Only applies to B4184S8		x						x		
<b>Gas filter crankcase ventilation,</b> in the air cleaner (ACL) housing -replace			x			x			x		
<b>Air cleaner (ACL), engine</b> -replace	Clean the air cleaner (ACL) housing.		x			x			x		
<b>Spark plugs</b> -replace			x			x			x		
<b>Program point:</b>	<b>year:</b>	<b>11</b>	<b>12</b>	<b>13</b>	<b>14</b>	<b>15</b>	<b>16</b>	<b>17</b>	<b>18</b>	<b>19</b>	<b>20</b>
	<b>km x 1000:</b>	<b>220</b>	<b>240</b>	<b>260</b>	<b>280</b>	<b>300</b>	<b>320</b>	<b>340</b>	<b>360</b>	<b>380</b>	<b>400</b>
	<b>miles x</b>	<b>137,5</b>	<b>150</b>	<b>162,5</b>	<b>175</b>	<b>187,5</b>	<b>200</b>	<b>212,5</b>	<b>225</b>	<b>237,5</b>	<b>250</b>



