



	level.													
<b>Engine oil, oil filter</b> - change oil and oil filter	Only applies to B4164T2	Change at 15,000 kilometres/ 9,000 miles interval or 1 year.												
	Only applies to B4204S3, B4164T, B4164T3, B4204T6, B4204T7	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Automatic transmission</b> - change oil and oil filter	<b>Change only according to km/miles interval</b>			x			x			x			x	
<b>Wheels and tires</b> (excluding spare wheel) - check for damage and signs of wear.		x	x	x	x	x	x	x	x	x	x	x	x	
<b>Program point:</b>	<b>year:</b> <b>km x 1000:</b> <b>miles x 1000:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
		<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
		<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Drive shafts</b> - check the play - check rubber bellows			x		x		x		x		x		x	
<b>Brake pads, brake discs</b> - check	Brake pads, front, check	x	x	x	x	x	x	x	x	x	x	x	x	
<b>Brake lines, fuel lines, fuel filter</b> - check for leakage and damage			x		x		x		x		x		x	
<b>External fuel filter,</b> For markets with contaminated fuel. - replace	<b>Max. 25 000 km</b> intervals More frequent replacement of the fuel filter may be required in some markets.													
<b>Front suspension, steering system</b> - check for wear according to: Wheel angles check			x		x		x		x		x		x	
<b>Rear wheel suspension</b> - check for wear according to: Wheel angles check			x		x		x		x		x		x	
<b>Lower the vehicle</b>														
<b>Program point:</b>	<b>year:</b> <b>km x 1000:</b> <b>miles x 1000:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
		<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
		<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Gas filter crankcase ventilation,</b> in air filter housing - change	Only applies to B4204S3  <b>Change only according to</b>		x		x		x		x		x		x	

	<b>km/miles interval</b>													
<b>Air cleaner (ACL) engine</b> - replace	Clean the air cleaner (ACL) housing.  <b>Change only according to km/miles interval</b>		x		x		x		x		x		x	
<b>Spark plugs</b> - replace	Only applies to B4164T2  <b>Change only according to km/miles interval</b>		x		x		x		x		x		x	
	Only applies to B4204S3, B4164T, B4164T3, B4204T6, B4204T7  <b>Change only according to km/miles interval</b>				x				x				x	
<b>Fluid levels - engine compartment</b> - check and adjust the brake fluid, clutch fluid, power steering fluid, washer fluid. coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Engine coolant</b> - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Vehicles with temporary tire sealing kit</b> - check sealant container - replace every four years (see decal)														
<b>Program point:</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
	<b>km x 1000:</b>	<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
	<b>miles x 1000:</b>	<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Accessory Drive Belt</b> -replace the belt according to the service program, or: - replace at a <b>maximum 10 year</b> interval									x					

<b>Timing belt / belt tensioner</b> - replace according to the service program or: - replace at a <b>maximum 10 year</b> interval	Only applies to B4164TX								x								
<b>Valve clearance</b> - check/adjust	Only applies to B4164T2			x					x					x			
<b>Brake fluid</b> - replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x		x		x		
	<b>The fluid must be changed every year if the car is used for mountain driving or is mainly used in humid climates.</b>	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
<b>SRI</b> - set the service reminder indicator (SRI) to zero	Resetting the service reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x