

bevel gear - check for leaks	the oil level if there is leakage		x		x		x		x		x		x	
AWD: Propeller shaft, pilot bearing, universal joint - check for signs of wear			x		x		x		x		x		x	
Lower the vehicle														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Air cleaner (ACL) engine - replace	Clean the air cleaner (ACL) housing. Change only according to km/miles interval.		x		x		x		x		x		x	
Fluid levels - engine compartment - check and adjust the brake fluid, clutch fluid, power steering fluid, washer fluid. coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit - check sealant container - replace every four years (see decal)														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Outer accessory drive belt and mechanical belt tensioner - replace according to the service program or: - replace at max. 10 year intervals	For engine No.: -884797		x				x			x			x	
Outer accessory drive belt (with hydraulic belt tensioner) -replace the belt according to the service program, or: - replace the belt at a maximum 10	From engine No.: 884798-1046801			x			x			x			x	

	indicator (SRI)																	
--	--------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--