

The oil does not normally need changing. The oil must be changed if instructed in the text information display.	or primarily used for towing, replace the oil according to the service program. AW55-50, see Gearbox fluid, replacing .			x			x			x	
Fuel filter -drain off the condensation -replace	See Fuel filter, draining .	x	x		x	x		x	x		x
	See Fuel filter, replacing . For markets with contaminated diesel - replace at an interval of 10 000 km.			x			x			x	
Wheels and tires -check	Check for damage and signs of wear.	x	x	x	x	x	x	x	x	x	x
Program point: S80 D5244T, D5244T2	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12,5	25	37.5	50	62,5	75	87,5	100	112.5	125
Drive shafts -check the play -check rubber bellows		x	x	x	x	x	x	x	x	x	x
		x	x	x	x	x	x	x	x	x	x
Brake pads, brake discs -check	Brake pads, front, check Brake pads, rear, check	x	x	x	x	x	x	x	x	x	x
Program point: S80 D5244T, D5244T2	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12,5	25	37.5	50	62,5	75	87,5	100	112.5	125
Brake lines, fuel lines, fuel filter -check for leakage and damage		x	x	x	x	x	x	x	x	x	x
Exhaust system -check	Check: condition, leakage, mounting.	x	x	x	x	x	x	x	x	x	x
Program point: S80 D5244T, D5244T2	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12,5	25	37.5	50	62,5	75	87,5	100	112.5	125

SRI - set the service reminder indicator (SRI) to zero	See Resetting the service reminder indicator (SRI) .	x	x	x	x	x	x	x	x	x	x
--	--	---	---	---	---	---	---	---	---	---	---

Program point: S80 D5244T, D5244T2	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Automatic transmission control -check the park / neutral position (PNP) switch		x	x	x	x	x	x	x	x	x	x
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x
External lighting -check the function		x	x	x	x	x	x	x	x	x	x
Washer and wipers for windshields and headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Engine -check for leaks		x	x	x	x	x	x	x	x	x	x
Program point: S80 D5244T, D5244T2	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Raise the vehicle											
Engine, transmission, transmission -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x
Engine oil, oil filter -drain the oil. Replace the oil filter.	See Oil/oil filter, replacing .	x	x	x	x	x	x	x	x	x	x
Automatic transmission The oil does not normally need changing. The oil must	For vehicles used as taxis or primarily used for towing, replace the oil according		x			x			x		

engine oil		x	x	x	x	x	x	x	x	x	x
Program point: S80 D5244T, D5244T2	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Fluid levels - engine compartment -check and adjust brake fluid, clutch fluid, power steering fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x
Engine coolant -check and adjust the anti-freeze rating and anti-corrosion agent		x	x	x	x	x	x	x	x	x	x
Battery -check: pole pieces, electrolyte level, mounting		x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit -check the container with sealing fluid, replace every fourth year, see decal											
Auxiliary unit belt, belt tensioner, idler pulley -replace according to the service program, or: - replace at a maximum 10 year interval	See Auxiliaries belt / belt tensioner, replacing .						x				
Program point: S80 D5244T, D5244T2	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137,5	150	162,5	175	187,5	200	212,5	225	237,5	250
Timing belt, belt tensioner, idler pulley -replace according to the service program,	See Replacing the timing belt .						x				

