

spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Drive shafts -check the play -check rubber bellows				x			x			x	
Brake pads, brake discs -check	Brake pads, front, check	x	x	x	x	x	x	x	x	x	x
	Brake pads, rear, check										
Brake lines, fuel lines -check for leakage and damage				x			x			x	
Fuel filter -replace -drain off the condensation	Change only according to km/miles interval			x			x			x	
		x	x		x	x		x	x		x
Fuel filter In markets with contaminated fuel: -replace	10 000 - 20 000 km interval										
Program point:	year:	1	2	3	4	5	6	7	8	9	10
	km x 1000:	20	40	60	80	100	120	140	160	180	200
	miles x 1000:	12.5	25	37.5	50	62.5	75	87.5	100	112.5	125
Front suspension, steering system -check for signs of wear				x			x			x	
Rear wheel suspension -check for signs of wear				x			x			x	
Lower the vehicle											
Air cleaner (ACL), engine -replace	Change only according to km/miles interval Clean the air			x			x			x	

idler pulley -replace according to the service program or: - replace at a maximum 10 year interval											
Air cleaner (ACL) passenger compartment -replace		x	x	x	x	x	x	x	x	x	x
Vehicle with camera for collision warning - clean the inside of the windscreen in front of the camera lens		x	x	x	x	x	x	x	x	x	x
Vehicles with alcolock - calibrate	Calibration must be performed once a year, when the information text in the display indicates this.										
Brake fluid -replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x
	The fluid must be replaced every year if the car is used for mountain driving or is mainly used in humid climates.	x	x	x	x	x	x	x	x	x	x
SRI - set the service reminder indicator (SRI)	Resetting the service reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x

| to zero | | | | | | | | | | | | |

Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Parking brake -check and adjust		x	x	x	x	x	x	x	x	x	x
External lighting -check the function		x	x	x	x	x	x	x	x	x	x
Horn - check the signal		x	x	x	x	x	x	x	x	x	x
Headlamp/fog lamp -check and align headlamps		x	x	x	x	x	x	x	x	x	x
Washer / wipers for windshields and headlamps -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Seat belts -check the function and for signs of wear		x	x	x	x	x	x	x	x	x	x
Program point:	year:	11	12	13	14	15	16	17	18	19	20
	km x 1000:	220	240	260	280	300	320	340	360	380	400
	miles x 1000:	137.5	150	162.5	175	187.5	200	212.5	225	237.5	250
Raise the vehicle											
Engine, transmission, transmission -check for leaks	In event of leakage from the transmission, check the oil level.	x	x	x	x	x	x	x	x	x	x
Engine oil, oil filter - change oil and oil filter		x	x	x	x	x	x	x	x	x	x
Wheels and tires (excluding spare wheel) - check for damage, wear, tire pressure		x	x	x	x	x	x	x	x	x	x
Program	year:	11	12	13	14	15	16	17	18	19	20

