

Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Air cleaner (ACL) engine - replace	Clean the air cleaner (ACL) housing. Change only according to km/miles interval.		x		x		x		x		x		x	
Fluid levels - engine compartment - check and adjust the brake fluid, clutch fluid, washer fluid. coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit - check sealant container - replace every four years (see decal)														
Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Outer accessory drive belt -replace the belt according to the service program, or: - replace the belt at a maximum 10 year interval							x						x	
Mechanical belt tensioner - replace according to the service program or: - replace at max. 10 year intervals							x						x	
Inner auxiliary belt - replace according to the service program or: - replace at max. 10 year intervals							x						x	
Timing belt, belt tensioner idler pulley - replace according to the service program or:							x						x	

