

	<p>specified in the service program.</p> <p>AW50-42, see: Gearbox fluid, replacing . Reset the counter.</p>												X
<p>Wheels and tires -check</p>	Check for damage and signs of wear.	X	X	X	X	X	X	X	X	X	X	X	X
<p>Program point S70/V70 Diesel engines</p>	<p>Year:</p> <p>Km x 1000:</p> <p>Miles x 1000:</p>	1	2	3	4	5	6	7	8	9	10		
		15	30	45	60	75	90	105	120	135	150		
		10	20	30	40	50	60	70	80	90	100		
<p>Drive shafts -check the play -check rubber bellows</p>							X	X	X	X	X	X	
<p>Brake pads / brake discs -check</p>	<p>Minimum brake pad thickness: Front.....3 mm/0.12" Rear.....2 mm/0.08" Check brake disc thickness and condition when replacing the brake lining.</p>	X	X	X	X	X	X	X	X	X	X	X	
<p>Brake and fuel lines and fuel filter -check for leakage and damage</p>	Including fuel filter and brake hoses.	X	X	X	X	X	X	X	X	X	X	X	
<p>Exhaust system -check</p>	Check: condition, leakage, mounting.						X	X	X	X	X	X	
<p><i>Raise the front wheels</i></p>													
<p>Program point S70/V70 Diesel engines</p>	<p>Year:</p> <p>Km x 1000:</p> <p>Miles x 1000:</p>	1	2	3	4	5	6	7	8	9	10		
		15	30	45	60	75	90	105	120	135	150		
		10	20	30	40	50	60	70	80	90	100		
<p>Front suspension and steering -check for signs of wear</p>							X	X	X	X	X	X	
<p>Rear suspension -check for signs of wear</p>							X	X	X	X	X	X	

