

bevel gear - check for leaks	the oil level if there is leakage		x		x		x		x		x		x	
AWD: Propeller shaft, pilot bearing, universal joint - check for signs of wear			x		x		x		x		x		x	
Lower the vehicle														
Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Air cleaner (ACL) engine - replace	Clean the air cleaner (ACL) housing. Change only according to km/miles interval.		x		x		x		x		x		x	
Fluid levels - engine compartment - check and adjust the brake fluid, clutch fluid, power steering fluid, washer fluid. coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit - check sealant container - replace every four years (see decal)														
Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Outer accessory drive belt and mechanical belt tensioner - replace according to the service program or: - replace at max. 10 year intervals	For engine No.: -884797		x				x			x			x	
Outer accessory drive belt (with hydraulic belt tensioner) -replace the belt according to the service program, or: - replace the belt at a maximum 10	From engine No.: 884798-1046801			x			x			x			x	

	indicator (SRI)																	
--	--------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--