

the brake fluid, clutch fluid, power steering fluid, washer fluid. coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit - check sealant container - replace every four years (see decal)														
Auxiliaries belts, belt tensioner -replace according to the service program or: - replace at a maximum 10 year interval	Only applies to B5254TX						x						x	
Auxiliary unit belt, belt tensioner, idler pulley -replace according to the service program or: - replace at a maximum 10 year interval	Applies only to B63x4x								x					
Rubber connection generator -replace according to the service program or: - replace at a maximum 15 year interval	Applies only to B63x4x See method for generator.								x					
Auxiliary unit belt, belt tensioner, idler pulleys -replace according to the service program or: - replace at a maximum 10 year interval	Only applies to B8444S								x					
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Timing belt, belt tensioner, idler pulley -replace according to the service program or: - replace at a	Only applies to B5254TX						x						x	

