

	level.													
Engine oil, oil filter - change oil and oil filter	Only applies to B4164T2	Change at 15,000 kilometres/ 9,000 miles interval or 1 year.												
	Only applies to B4204S3, B4164T, B4164T3, B4204T6, B4204T7	x	x	x	x	x	x	x	x	x	x	x	x	x
Automatic transmission - change oil and oil filter	Change only according to km/miles interval			x			x			x			x	
Wheels and tires (excluding spare wheel) - check for damage and signs of wear.		x	x	x	x	x	x	x	x	x	x	x	x	
Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Drive shafts - check the play - check rubber bellows			x		x		x		x		x		x	
Brake pads, brake discs - check	Brake pads, front, check	x	x	x	x	x	x	x	x	x	x	x	x	
Brake lines, fuel lines, fuel filter - check for leakage and damage			x		x		x		x		x		x	
External fuel filter, For markets with contaminated fuel. - replace	Max. 25 000 km intervals More frequent replacement of the fuel filter may be required in some markets.													
Front suspension, steering system - check for wear according to: Wheel angles check			x		x		x		x		x		x	
Rear wheel suspension - check for wear according to: Wheel angles check			x		x		x		x		x		x	
Lower the vehicle														
Program point:	year: km x 1000: miles x 1000:	1	2	3	4	5	6	7	8	9	10	11	12	13
		30	60	90	120	150	180	210	240	270	300	330	360	390
		18	36	54	72	90	108	126	144	162	180	198	216	234
Gas filter crankcase ventilation, in air filter housing - change	Only applies to B4204S3 Change only according to		x		x		x		x		x		x	

	km/miles interval													
Air cleaner (ACL) engine - replace	Clean the air cleaner (ACL) housing. Change only according to km/miles interval		x		x		x		x		x		x	
Spark plugs - replace	Only applies to B4164T2 Change only according to km/miles interval		x		x		x		x		x		x	
	Only applies to B4204S3, B4164T, B4164T3, B4204T6, B4204T7 Change only according to km/miles interval				x				x				x	
Fluid levels - engine compartment - check and adjust the brake fluid, clutch fluid, power steering fluid, washer fluid. coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant - check and adjust the antifreeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
Vehicles with temporary tire sealing kit - check sealant container - replace every four years (see decal)														
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Accessory Drive Belt -replace the belt according to the service program, or: - replace at a maximum 10 year interval									x					

Timing belt / belt tensioner - replace according to the service program or: - replace at a maximum 10 year interval	Only applies to B4164TX								x								
Valve clearance - check/adjust	Only applies to B4164T2			x					x					x			
Brake fluid - replace	Recommend that a customer with normal mileage has the fluid replaced every other year.		x		x		x		x		x		x		x		
	The fluid must be changed every year if the car is used for mountain driving or is mainly used in humid climates.	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
SRI - set the service reminder indicator (SRI) to zero	Resetting the service reminder indicator (SRI)	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x