

of wear														
Rear wheel suspension -check for signs of wear			x		x		x		x		x		x	
AWD: Final drive, bevel gear -check for leaks	Only check the oil level if there is leakage.		x		x		x		x		x		x	
AWD: Propeller shaft, pilot bearing, universal joint -check for signs of wear			x		x		x		x		x		x	
Lower the vehicle														
Air cleaner (ACL), engine -replace	Clean the air cleaner (ACL) housing.		x		x		x		x		x		x	
Spark plugs -replace			x		x		x		x		x		x	
Program point:	year:	1	2	3	4	5	6	7	8	9	10	11	12	13
	km x 1000:	30	60	90	120	150	180	210	240	270	300	330	360	390
	miles x 1000:	18	36	54	72	90	108	126	144	162	180	198	216	234
Fluid levels - engine compartment -check and adjust brake fluid, clutch fluid, power steering fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
Engine coolant -check and adjust the anti-freeze rating and anti-corrosion agent		x	x	x	x	x	x	x	x	x	x	x	x	x
Battery - check: poles, electrolyte level, mounting			x		x		x		x		x		x	
Vehicles with temporary tire sealing kit - check the container with sealer fluid, replace every fourth year, see decal.														
Accessory Drive Belt -replace according to the service program							x						x	

