





-check for signs of wear														
<b>Rear wheel suspension</b> -check for signs of wear		x		x		x		x		x		x		
<b>AWD: Final drive, bevel gear</b> -check for leaks	Only check the oil level if there is leakage.	x		x		x		x		x		x		
<b>AWD: Propeller shaft, pilot bearing, universal joint</b> -check for signs of wear		x		x		x		x		x		x		
<b>Lower the vehicle</b>														
<b>Air cleaner (ACL), engine</b> -replace	Clean the air cleaner (ACL) housing.	x		x		x		x		x		x		
<b>Spark plugs</b> -replace		x		x		x		x		x		x		
<b>Program point:</b>	<b>year:</b>	<b>1</b>	<b>2</b>	<b>3</b>	<b>4</b>	<b>5</b>	<b>6</b>	<b>7</b>	<b>8</b>	<b>9</b>	<b>10</b>	<b>11</b>	<b>12</b>	<b>13</b>
	<b>km x 1000:</b>	<b>30</b>	<b>60</b>	<b>90</b>	<b>120</b>	<b>150</b>	<b>180</b>	<b>210</b>	<b>240</b>	<b>270</b>	<b>300</b>	<b>330</b>	<b>360</b>	<b>390</b>
	<b>miles x 1000:</b>	<b>18</b>	<b>36</b>	<b>54</b>	<b>72</b>	<b>90</b>	<b>108</b>	<b>126</b>	<b>144</b>	<b>162</b>	<b>180</b>	<b>198</b>	<b>216</b>	<b>234</b>
<b>Fluid levels - engine compartment</b> -check and adjust brake fluid, clutch fluid, power steering fluid, washer fluid, coolant		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Engine coolant</b> - check/adjust the anti-freeze/corrosion protection rating		x	x	x	x	x	x	x	x	x	x	x	x	x
<b>Battery</b> - check: poles, electrolyte level, mounting			x		x		x		x		x		x	
<b>Vehicles with temporary tire sealing kit</b> - check the container with sealer fluid, replace every fourth year, see decal.														
<b>Accessory Drive Belt</b> -replace according to the service program							x						x	

